



HEATER RELAY

ON-VEHICLE INSPECTION

- 1. **INSPECT RELAY (Marking: HTR)**
 - (a) Measure the resistance of the HTR relay.
Standard resistance

Tester Connection	Specified Condition
3 - 4	Below 1 Ω
3 - 5	10 kΩ or higher
3 - 5	Below 1 Ω (when battery voltage is applied to terminals 1 and 2)

If the result is not as specified, replace the relay.